## **User's Manual**



# Digital Set Top Box S610A



### Contents

Safety Instructions	3
Product Overview	4
- Front View	4
- Rear View	5
Remote Control Unit (RCU)	6
Set Top Box Connections	7
Basic Settings	8
Basic Functions	11
- Electronic Program Guide (EPG)	11
Channel List	12
- Channel Bar	13
-Bookings	14
Troubleshooting	15

### **Safety Instruction**



To avoid danger of electric shock or damage to the receiver, do not remove the cover of the receiver box. Any servicing should be done by authorized and qualified personnel only.



 
Refrain from spilling any liquids on the receiver box to avoid damaging the equipment. In the event this happens, kindly unplug box from power source. Do not use or store your receiver in cold, hot, damp or dusty places and keep away from all water sources and liquids.



 Do not place the receiver box near any cooking applliance. Spills from food being cooked may damage the receiver box.
 Also, keep receiver box away from any source of heat



Do not block ventilation holes of the receiver. This may result to overheating and damage the receiver box.




If the receiver unit malfunctions, unplug the unit from the power source.



 During thunder storms, refrain from touching the receiver unit. There may be instances of electric shock.

### **Product Overview**

### Front View ::

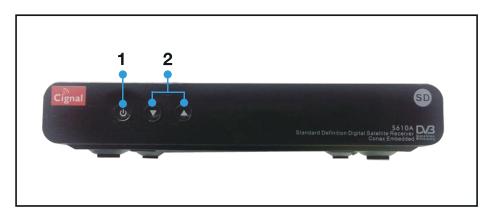


**1. On/Standby** : Switch the STB to On or Standby.

#### 2. CH ▼/▲

: In normal TV mode, these changes the channels. When in the Main Menu, these will move the selector.

### **Product Overview**

### **Rear View:**

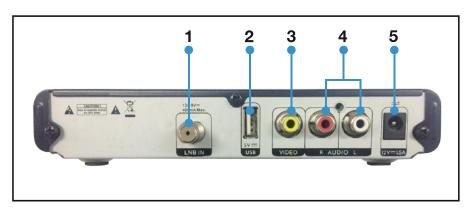

#### 1. LNB IN

: Connect this to a dish antenna to receive the digital broadcast.

#### 2. USB

: Used for Set Top Box software updates.

#### 3. RCA Video Connector

: Connect this to the composite video input of the TV.

#### 4. RCA Audio Connector

: Connect these to desired audio output system.

#### 5. DC POWER

: Connect to the power supply.

### Remote Control Unit (RCU)




Key	Function
Ů	Switch ON/OFF the STB
CH+,CH-	Channel up/down
VOL+,VOL-	Volume up/down
▲ ▼	Channel up/down or move cursor up/down
<b>♦</b> ►	Volume up/down or move cursor left/right
ок	Enter or select item, or open channel list
MENU	Access the Home menu
BACK	Back to previous channel or menu
EXIT	Cancel or return from the menu
EPG	Display EPG information
0~9	Channel number or number entry
TV/RADIO	Switch between TV mode and Radio mode
FAV	Access the Favorites Channel list
	Access the Bmail screen
INFO	Show the information of current channel
₩	Mute the sound
* AUDIO	Switch audio tracks
* _	Switch on/off teletext or subtitle mode
EVENTS	Display booked events list
DIAGNOSTICS	Display diagnostics list
$\square \backslash_R^L$	Switch between audio modes
SETUP	Access user setup menu

\* - Multiple languages, teletext and subtitles are dependent on availability

### **Set Top Box Connections**

- ◆ DO NOT PLUG the STB into the main power outlet until all the other cables are connected to the STB.
- Before connecting the cables, you should first connect the LNB IN connector
  of the STB to the cables from the satellite.

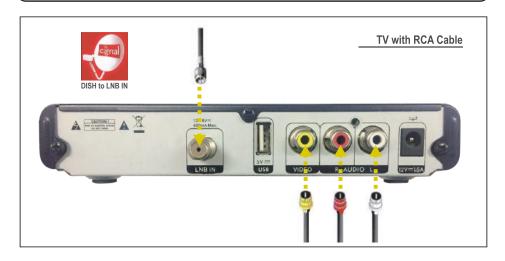



### **Basic Settings**

For newly installed STB, check that all the cables are connected to the STB and perform the setup procedure.

When using the STB for the first time, ensure that all cables are connected, as per the instructions on page 7, and perform the following setup procedure.

#### WARNING

- Press MENU button to save previously input data and exit the basic settings.
   If you are exiting the setup without first successfully completing the set-up procedure, no TV and radio channels will be available.
- Make sure that video display setting matches the TV type or else no video will be seen.
  - To change the video format, go to SETTINGS > USER > VIDEO OUTPUT.
- 1. After turning on your TV and STB, follow the instructions on the screen. Press OK button to start the basic setting.



### **Basic Settings**

The following LNB Setup menu appears after the welcome screen.
 Use the ◀ / ▶ buttons to select the Input Source type and press OK on the RCU.




3. Select the required Transporter and press OK on the RCU.




### **Basic Settings**

4. The Signal lock screen displays and the STB will scan all available service channels.

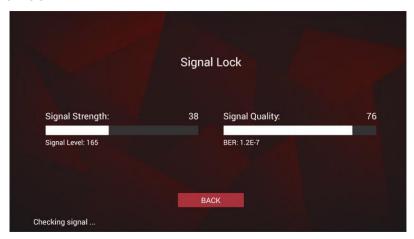

All your TV and radio channels are available for selection in the EPG.

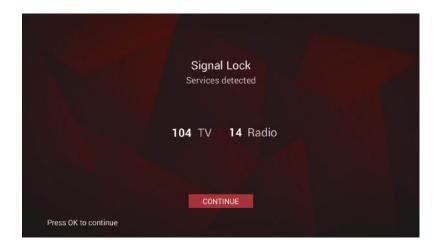


#### **Electronic Program Guide (EPG)**

- 1. The EPG shows program information on each channel by date and time.
- 2. To activate the EPG, go to MENU > GUIDE or Press EPG key on the RCU.
- 3. Channels on display will have their channel numbers & channels are shown at a time.
- 4. The Listings Grid shows 1 and a half hours' worth of TV listings for the channels shown in the Channel List.
- 5. Upon entering, the synopsis box on the right side will not be shown.
- 6. Press the INFO key on the RCU to show the synopsis.



#### **Channel List**

 To access the Channel List, press MENU then go to LIVE TV. The list of available channels with their respective channel number assignment and channel name are displayed.

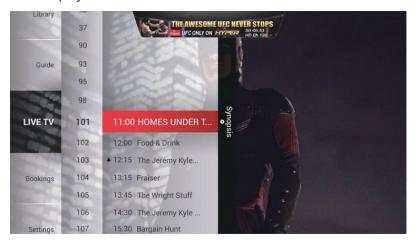

2. To see the program synopsis or book a program reminder, select a channel then a prografrom the list and press OK.

#### **Channel Bar**


- The Channel Bar displays basic information about the channel and its programsl.
   The Channel Bar is displayed when zapping or by pressing the INFO button while viewing a channel.
- 2. To access more information about the channel or program, press the INFO button again.
- 3. Press the EXIT button to remove the Channel Bar or when in the channel information view.



#### **Bookings**

The Set Top Box allows you to manage channel-related events using the Timer Event functions. You can set an alert to inform you when your favorite shows are being broadcasted and turn the STB on or off depending on the schedules that have been setup.

To access this feature, go to MENU > BOOKINGS.

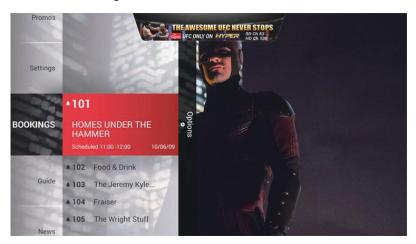

### **Troubleshooting**

Before contacting the service centre, review the list of problems in the Troubleshooting table below. If a solution is not available from the table, please contact the service centre.

Problem	Description	Possible solution
Time setting is wrong	The time set is incorrect	Adjust the time in the menu
No LED display on the front panel	Power cord is not plugged correctly	Plug the power cord correctly
No video on the screen	STB in standby mode	Turn ON the STB
	A/V output is not connected firmly to TV video output	Check the cable connection
	Incorrect video output selected from the TV	Check video output
No Sound	Audio cord is connected incorrectly	Check A/V cable connection
	Volume level is 0.	Increase volume on TV set
	Muting is active	Press the MUTE key
Remote Control Unit (RCU) is not working	Incorrect operation	Point the remote control towards the STB
	Batteries are dead or inserted incorrectly	Replace the batteries or insert them correctly
Poor picture quality	Signal strength is too low	Check the signal strength from "INSTALLATION" menu. Check the LNB cable.